



XP-8s

Advanced Control Processor

Quick Reference Guide



XP-8s Advanced Control Processor

The XP-8s is a high-end remote control processor for automating the operation of electronic systems in homes and office buildings. The combination of a blazing fast MPU, real-time/multitasking operating system, and tremendous expandability make the XP-8s the perfect solution for large-scale and complex projects.


The XP-8s provides superior quality and reliability as well as these features:

- Powerful 532MHz i.MX processor.
- 128Mb of non-volatile Flash memory.
- Front panel controls/display (11 Buttons for front panel control).
- Includes 4GB SD Flash memory card.
- Eight multi-purpose I/O ports.
- Eight programmable relay outputs.
- Eight two-way RS-232 ports.
- Eight sense inputs.
- Multi-purpose I/O ports are compatible with industry-standard IR emitters, blasters and repeater systems.
- All output ports incorporate both short-circuit and overload protection.
- Variable IR output on all ports.
- Multi-purpose I/O ports support all optional RTI power sensing and communications modules.
- Non-volatile Flash memory stores your system configuration even when power is not present.
- Field upgradeable firmware.
- USB and Ethernet programming.
- Input for connection of multiple RF receiver modules.
- Astronomical clock built in.
- Rack mountable or free standing.

Installation & Operation

The XP-8s can be connected in many different ways to control a variety of devices. The following diagram illustrates just some of the options. Optional accessories shown are sold separately.)

MPIO PORTS - Infrared/Sensing/RS-232 (One-way)

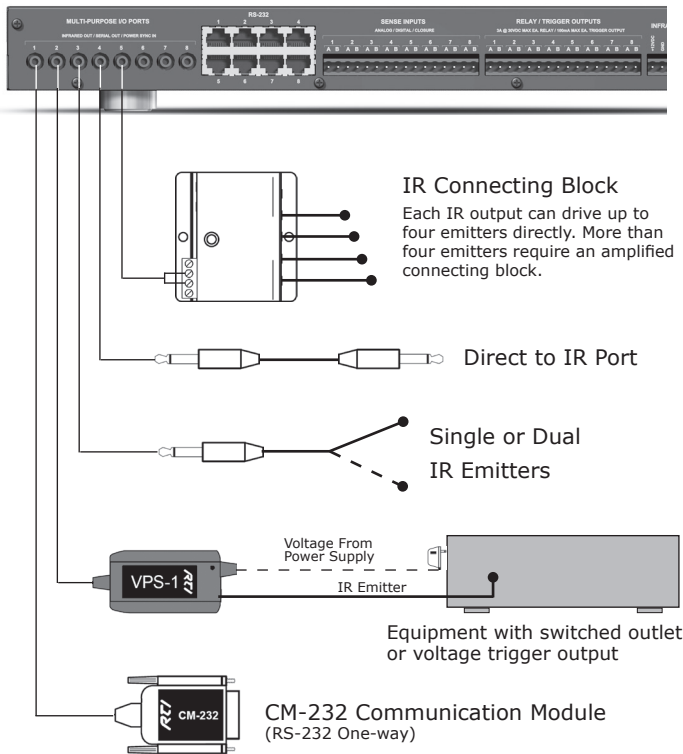

CONNECTING IR EMITTERS TO OUTPUT PORTS

The multi-purpose I/O ports on the XP-8s are compatible with industry standard infrared emitters and infrared repeating systems. Each output port is capable of driving up to four infrared emitters directly. The use of more than four infrared emitters requires the addition of an amplified connecting block. A connecting block can be wired up to 1000 feet away from the XP-8s using #22 AWG (minimum) wire.

ADJUSTING IR OUTPUT GAIN

The IR output gain can be separately adjusted for each of the eight output ports. The XP-8s is shipped with the IR gain set to the optimum level for most equipment, and it should only need to be adjusted if the attached equipment is not responding reliably. If adjustment is needed, rotate the IR output controls on the front of the XP-8s clockwise for higher output power, or counter-clockwise for lower output power.

NOTE: The IR Output Feedback LEDs will illuminate when any IR code is delivered from the XP-8s - this includes IR codes "passing through" from another source such as an IR receiver.


CONNECTING VPS-1 SENSOR MODULE

The multi-purpose I/O ports on the XP-8s are compatible with RTI power sensing modules (e.g. VPS-1 and SPS-1). Follow the guide included with the modules for installation instructions, and follow the instructions in the *Integration Designer*® software guide for programming details.

CONNECTING COMMUNICATION MODULES (CM-232)

The multi-purpose I/O ports on the XP-8s are compatible with RTI communication modules (e.g. CM-232). Follow the guide included with the modules for installation instructions, and follow the instructions in the *Integration Designer*® software guide for programming details.

RS-232 PORTS

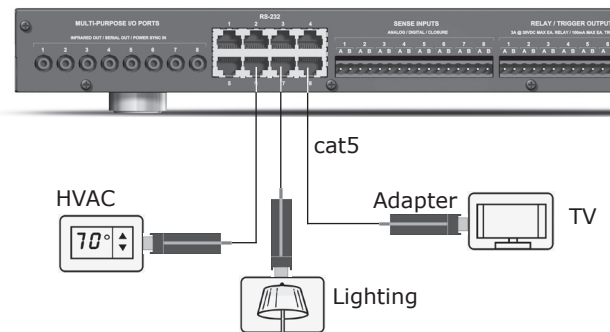


The XP-8s is capable of two-way communication and uses industry standard cat5 cable with RJ-45 termination (568B). The XP-8s ships with 8 RJ-45 (female) to DB-9 (male) adapters.

NOTE: RS-232 communication cabling should be limited to 50 feet (16m) depending on baud rate.

DB9 - RJ45 ADAPTOR PINOUT

RJ-45 (XP-8s RS-232 Output)


Pin	Signal Name	Signal Description
1	DSR	Data Set Ready
2	DCD	Carrier Detect
3	DTR	Data Terminal Ready
4	GND	Signal Ground/Common
5	RXD	Receive Data
6	TXD	Transmit Data
7	CTS	Clear To Send
8	RTS	Request To Send

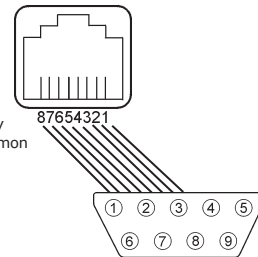

DB-9

Pin	Signal Name	Signal Description
1	DCD	Carrier Detect
2	RXD	Receive Data
3	TXD	Transmit Data
4	DTR	Data Terminal Ready
5	GND	Signal Ground
6	DSR	Data Set Ready
7	RTS	Request To Send
8	CTS	Clear To Send
9	NC	Not Connected


SENSE INPUTS

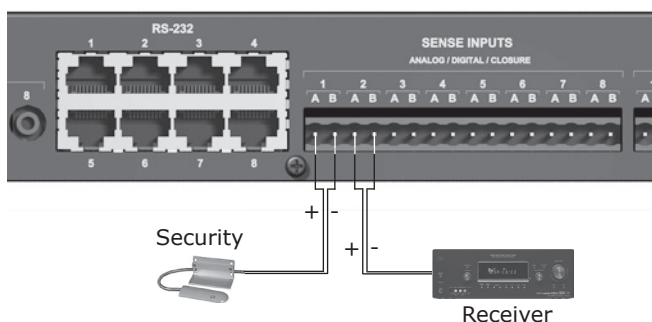

Sense contact closure or voltage trigger input (2-12VDC). Sense input mode can be configured within *Integration Designer*®. Upon sensing contact closure or trigger input, events can be automatically triggered such as IR commands, macros, relay closure, etc.

- Wiring for contact closure sense: connect conductors from device to be sensed to each side of a sense input (A and B).
- Wiring for voltage trigger sense: Connect positive lead from voltage source to Side A of sense input and negative lead to Side B.


RELAY/TRIGGER OUTPUTS

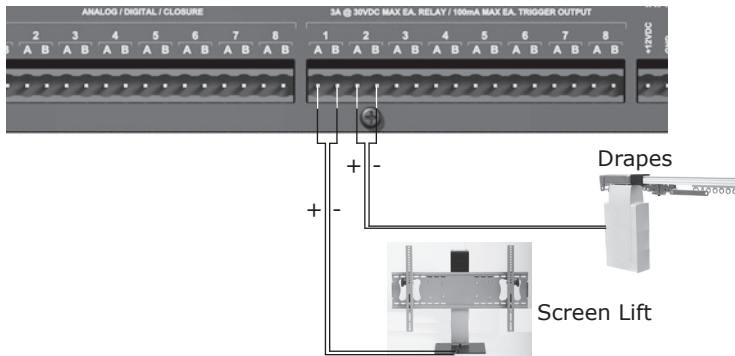

Configurable within *Integration Designer*® to be either a dry contact closure or a voltage trigger output (12VDC @100mA). All relays are Normally Open when not energized, but they can be programmed to behave Normally Closed (as long as power is applied to the XP-8s). For contact closure control, connect the A and B contact terminals of a relay to the desired device.

To use a relay as a voltage trigger, connect Contact A to the positive side and connect Contact B to the ground side of the desired device.

SIGNAL IN/HIGH OUT/POWER TERMINALS

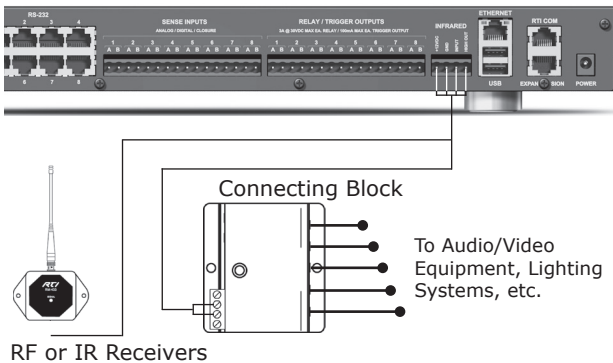

■ TERMINAL: +12VDC

Positive power supply connection. It is internally tied to the Power jack. This can be used to power external IR or RF receivers.

■ TERMINAL: GROUND

Common ground connection. Use this ground reference for any device that is connected to the +12VDC, SIGNAL IN, OR HIGH OUT terminals.


■ TERMINAL: SIGNAL IN

Input connection for system trigger codes. This should be connected to an RTI RM-433 RF receiver or industry standard IR repeater system. The signal voltage can be from 3VDC - 12VDC.

■ TERMINAL: HIGH OUT

High current (200mA) IR output connection. This can be used to power up to 10 infrared mini-emitters, an IR blaster, or extending IR control over a long distance (1000 ft. max).

ETHERNET, USB, RTI COM, EXPANSION PORT

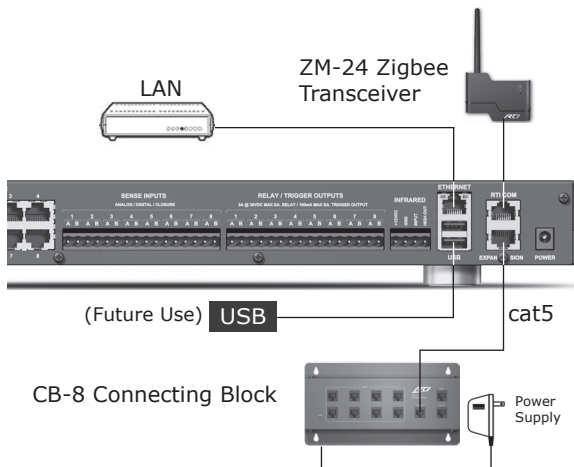

ETHERNET

This RJ-45 port allows connection to a 10/100 Base-T Ethernet network (LAN). Network settings such as the IP address are configurable within *Integration Designer*®. Ethernet can be used to download system files to the XP-8s.

USB PORTS (REAR)

These are host ports for external devices and are intended for future use.

RTI COM

This RJ-45 port allows connection to a ZM-24 Zigbee® transceiver module. The connection supports full duplex two-way communication for use with compatible RTI handheld controllers. Refer to the ZM-24 Zigbee transceiver module operation guide for installation instructions.

EXPANSION PORT

This RJ-45 port provides a convenient connection for receiving IR signals and two-way RS-485 communication from RTI in-wall controls through a CB-8 connecting block.

NOTE: In-wall controllers may be connected directly to the XP-8s Expansion Port, however, they should be powered with a separate power supply.

PROGRAMMING THE XP-8s

The XP-8s must be programmed to operate. All programming is done using RTI's *Integration Designer*® software and is downloaded using the USB Programming Port located on front of XP-8s or via Ethernet.


UPDATING FIRMWARE

It is highly recommended that this and all RTI products have the latest firmware installed. The firmware can be found in the Dealer section of the RTI website (www.rticorp.com). Install the firmware using the USB Programming Port located on front of XP-8s.

MOUNTING

The XP-8s ships with four removable feet that allow the XP-8s to be placed on a flat surface. The XP-8s can also be mounted in a component rack as part of a comprehensive control system. Remove feet before mounting in a rack.

XP-8s Front

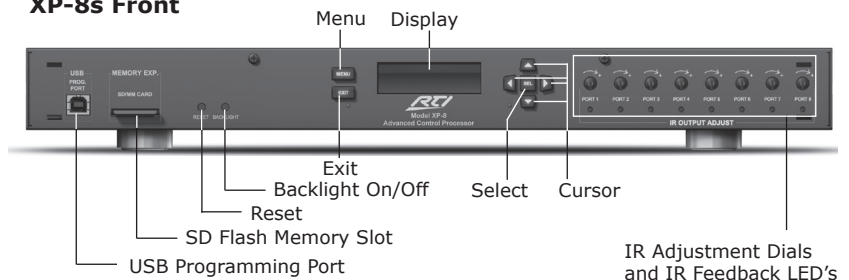

Rack Mount Option



Federal Communications Commission Notice

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the device.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference received including interference that may cause undesired operation.



DECLARATION OF CONFORMITY (DOC)

The Declaration of Conformity for this product can be found on the RTI website at: www.rticorp.com/declaration

Safety Suggestions

Read and Follow Instructions. Read all safety and operating instructions before operating the unit.

Retain Instructions. Keep the safety and operating instructions for future reference.

Heed Warnings. Adhere to all warnings on the unit and in the operating instructions.

Heat. Keep the unit away from heat sources such as radiators, heat registers, stoves, etc., including amplifiers that produce heat.

Power Sources. Connect the unit only to a power supply of the type described in the operating instructions, or as marked on the unit.

Power Cord Protection. Route power supply cords so that they are not likely to be walked on or pinched by items placed on or against them, paying particular attention to the cord plugs at power receptacles and at the point at which they exit from the unit.

Water and Moisture. Do not use the unit near water—for example, near a sink, in a wet basement, near a swimming pool, near an open window, etc.

Object and Liquid Entry. Do not allow objects to fall or liquids to be spilled into the enclosure through openings.

Servicing. Do not attempt any service beyond that described in the operating instructions. Refer all other service needs to qualified service personnel.

Damage Requiring Service. The unit should be serviced by qualified service personnel when:

- The power supply cord or the plug has been damaged.
- Objects have fallen or liquid has been spilled into the unit.
- The unit has been exposed to rain.
- The unit does not appear to operate normally or exhibits a marked change in performance.
- The unit has been dropped or the enclosure has been damaged.

Limited Warranty

RTI warrants its products for a period of one (1) year; or for a period of time compliant with local laws when applicable from the date of purchase from RTI or an authorized RTI distributor.

This warranty may be enforced by the original purchaser and subsequent owners during the warranty period, so long as the original dated sales receipt or other proof of warranty coverage is presented when warranty service is required.

Except as specified below, this warranty covers all defects in material and workmanship in this product. The following are not covered by the warranty:

Damage resulting from:

1. Accident, misuse, abuse, or neglect.
2. Failure to follow instructions contained in this Guide.
3. Repair or attempted repair by anyone other than Remote Technologies Incorporated.
4. Failure to perform recommended periodic maintenance.
5. Causes other than product defects, including lack of skill, competence or experience of user.
6. Shipment of this product (claims must be made to the carrier).
7. Being altered or which the serial number has been defaced, modified or removed.

Contacting RTI

For news about the latest updates, new product information, and new accessories, please visit our web site at:

www.rticorp.com

For general information, you can contact RTI at:

Remote Technologies Incorporated

5775 12th Ave. E Suite 180

Shakopee, MN 55379

Tel. (952) 253-3100

Fax (952) 253-3131

info@rticorp.com

Service & Support

If you are encountering any problems or have a question about your RTI product, please contact RTI Technical Support for assistance (see the Contacting RTI section of this guide for contact details). RTI provides technical support by telephone or e-mail. For the highest quality service, please have the following information ready, or provide it in your e-mail.

- Your Name
- Company Name
- Telephone Number
- E-mail Address
- Product model and serial number (if applicable)

If you are having a problem with hardware, please note the equipment in your system, a description of the problem, and any troubleshooting you have already tried.

Please do not return products to RTI without a return authorization.